



**Audi > B6 Platform > 2002 - 2005  
Electrical Equipment  
92 - Windshield Washer System**

**Washer fluid reservoir - Audi A4 S4, removing and installing**

**Top section of reservoir, removing**

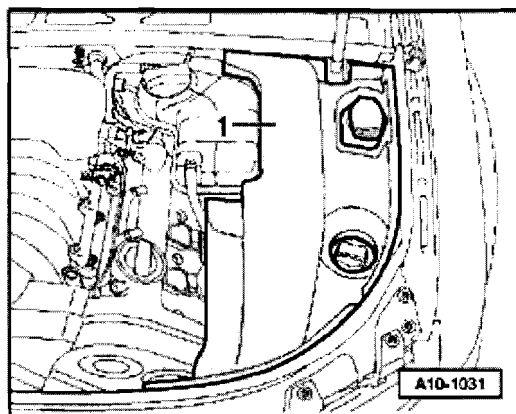


- Remove left engine cover - 1 - .

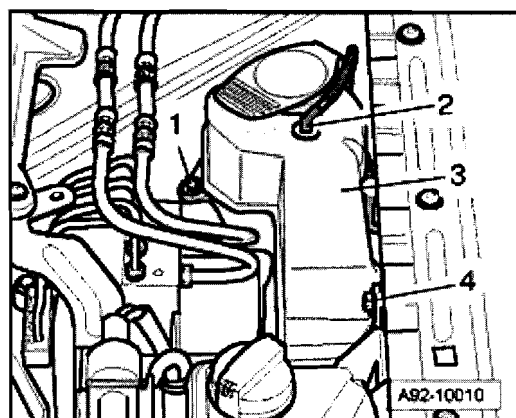

- Where applicable, remove overflow hose - 2 - from reservoir - 3 - .
- Remove nut - 1 - and bolt - 4 - .
- Pull top section of reservoir upwards out of bottom section.

**Bottom section of reservoir, removing**


- Remove left front wheel.
- Remove left front wheel housing liner ⇒ Body Exterior - Repair Group 66 .

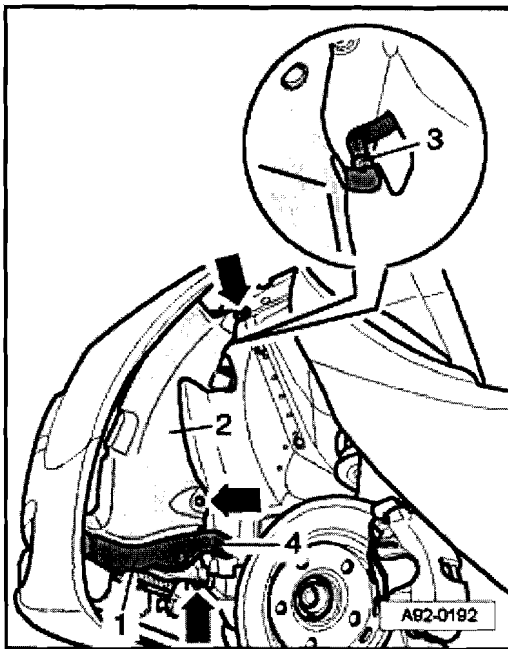

- Remove bottom section of reservoir - 2 - - arrows - .
- Swivel bottom section of reservoir slightly to rear.

**Note:**

- ♦ *If it is not possible to swivel bottom section of reservoir, remove bolt - 4 - and detach cross member - 1 - .*
- Where applicable, detach overflow hose - 3 - from reservoir section.

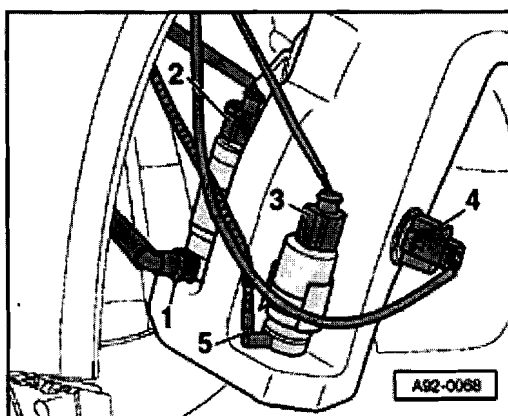


- Disconnect electrical connections - 2 ... 4 - .
- Press release tab and pull off hose connector - 1 - .
- Pull off washer fluid pipe - 5 - .
- Remove washer fluid reservoir downwards.

**Installing**

Install in reverse order of removal, noting the following:

**Note:**

- ◆ Clean thread of bolts from remnants of locking fluid using wire brush. Then apply locking fluid and fit bolts. Locking fluid Parts Catalog .
  - ◆ Clean tapped holes from remnants of self-locking bolts or locking fluid (e.g. using a thread tap). Otherwise the bolts can shear off if they have to be removed again later.
- When installing, ensure that the water hose audibly engages in the connection on the washer fluid pump.

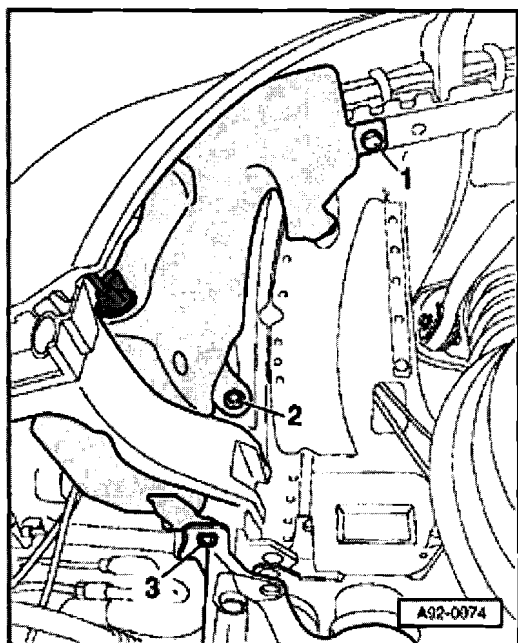

- Tighten bolts in sequence - 1 ... 3 - .

**Tightening torques**

Component - fastener		Nm
	self-locking bolt M6	18 <sup>1) 2)</sup>
Top section of reservoir to body	nut	5.5
Bottom section of reservoir to body - screw		7
◆ <sup>1)</sup> Replace bolt.		
◆ <sup>2)</sup> Insert with locking compound; locking compound Parts Catalog .		